

MANUALE D'USO

FRULLATORE

IT

INSTRUCTION MANUAL

BLENDER

EN

MANUEL D'UTILISATION

MIXEUR

FR

BEDIENUNGSHANDBUCH

STANDMIXER

DE

GEBRUIKSAANWIJZING

BLENDER

NL

MANUAL DE USO

LICUADORA

ES

MANUAL DE UTILIZAÇÃO

LIQUIDIFICADOR

PT

BRUKSANVISNING

MIXER

SV

РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ

БЛЕНДЕР

RU

BRUGERVEJLEDNING

BLENDER

DA

INSTRUKCJA OBSŁUGI

BLENDER KIELICHOWY

PL

KÄYTTÖOPAS

TEHOSEKOITIN

FI

BRUKSANVISNING

BLENDER

NO

دليل التعليمات
الخلاط

AR

 smeg

Informazioni importanti per l'utente
Important information for the user
Informations importantes pour l'utilisateur
Wichtige Informationen für den Benutzer
Belangrijke informatie voor de gebruiker
Información importante para el usuario
Informações importantes para o utilizador
Viktig information för användaren
Важная информация для пользователя
Viktig information til brugeren
Ważne informacje dla użytkownika
Tärkeittä tietoja käyttäjälle
Viktig informasjon for brukere
معلومات هامة للمستخدم



Avvertenze / Recommendations / Avertissements / Hinweise / Waarschuwingen /
Advertencias / Advertências / Varningar / Меры предосторожности / Advarsler /
Ostrzeżenia / Varoitus / Advarsler / تحذيرات



Descrizione / Description / Description / Beschreibung / Beschrijving / Descripción /
Descrição / Beskrivning / Описание / Beskrivelse / Opis / Kuvaus / Beskrivelse / الوصف



Use / Use / Utilisation / Gebrauch / Gebruik / Uso / Utilização / Användning /
Использование / Anvendelse / Użytkowanie / Käyttö / Bruk / الإستعمال



Pulizia e manutenzione / Cleaning and care / Nettoyage et entretien /
Reinigung und Wartung / Reiniging en onderhoud / Limpieza y mantenimiento /
Limpeza e manutenção / Rengöring och underhåll / Чистка и техническое
обслуживание / Rengöring og vedligeholdelse / Czyszczenie i konserwacja /
Puhdistus ja hoito / Rengjøring og vedlikehold / التنظيف و الصيانة



Avvertenza di sicurezza / Safety instructions / Consignes de sécurité /
Sicherheitshinweise / Veiligheidswaarschuwingen / Advertencia de seguridad /
Advertências de segurança / Säkerhetsvarning / Предупреждение о безопасности /
Sikkerhedsanvisninger / Ostrzeżenie dotyczące bezpieczeństwa /
Turvallisuuteen liittyvät varoitukset / Sikkerhetsadvarsler / تحذير للسلامة



Informazione / Information / Information / Information / Informatie /
Información / Informação / Information / Информация / Information /
Informacja / Tietoja / Informasjon / معلومات



Suggerimento / Advice / Conseil / Empfehlungen / Aanbeveling / Sugerencia /
Sugestões / Råd / Рекомендация / Forslag / Porada / Neuvo / Forslag / اقتراحات

Gentile Cliente, La ringraziamo vivamente per il Suo acquisto. I nostri prodotti sono unici perché uniscono una spiccata ricerca estetica alla progettazione tecnica innovativa. Essi sono coordinati con altri prodotti in gamma e possono costituire elementi d'arredo e di design. Augurandole di apprezzare appieno le funzionalità del Suo elettrodomestico, Le porgiamo i nostri più cordiali saluti.

Dear Customer, Thank you for purchasing one of our appliances. Our products are unique because they combine iconic style with innovative technical solutions. They match perfectly with other products in our range and work equally well as a standalone design objects in your kitchen. We hope you enjoy using your new appliance! Best regards.

Cher client, merci beaucoup pour votre achat. Nos produits sont uniques car ils combinent une forte recherche esthétique avec une conception technique innovante. Ils sont coordonnés avec d'autres produits de la gamme et peuvent constituer des éléments d'ameublement et de design. En espérant que vous pourrez apprécier pleinement votre nouvel appareil électroménager, nous vous adressons nos meilleures salutations.

Sehr geehrter Kunde, wir danken Ihnen herzlichst für den Kauf. Unsere Produkte sind einzigartig, da sich in ihnen eine gewissenhafte Designforschung und eine innovative technische Planung vereinen. Sie sind mit anderen Produkten des Sortiments kombinierbar und stellen ausgefallene Einrichtungs- und Designgegenstände dar. Wir hoffen, dass Sie Ihr neues Haushaltsgerät voll und ganz schätzen werden und verbleiben mit freundlichen Grüßen.

Beste klant, hartelijk dank voor uw aankoop. Onze producten zijn uniek omdat ze esthetiek combineren met innovatief technisch ontwerp. De producten zijn uitstekend te combineren andere producten van het assortiment en kunnen worden gebruikt als meubel- en designelementen. We hopen dat u volop van uw nieuwe huishoudelijke apparaat zult genieten. Met vriendelijke groet

Estimado cliente, le damos las gracias por su compra. Nuestros productos son únicos porque combinan una notable búsqueda estética con un diseño técnico innovador. Se combinan con otros productos de la gama y se pueden utilizar como elementos de decoración y diseño. Le deseamos que pueda apreciar plenamente su nuevo electrodoméstico. Le enviamos nuestros saludos más cordiales.

Prezado cliente, Muito obrigado pela sua compra. Os nossos produtos são únicos porque combinam uma forte busca estética com um desenho técnico inovador. São coordenados com outros produtos da linha e podem constituir elementos de decoração e design. Esperando que possa desfrutar totalmente das funcionalidades do seu eletrodoméstico, enviamos-lhe os nossos melhores cumprimentos.

Bäste kund, vi vill tacka dig för ditt köp. Våra produkter är unika eftersom de kombinerar ett estetiskt nytänkande med innovativ teknik. Våra produkter passar med de andra i samma serie och kan användas som föremål inom heminredningen för att ge en särskild känsla av stil i ditt hem. Vi hoppas att du till fullo kommer att uppskatta funktionerna hos din hushållsmaskin. Med bästa hälsningar.

Уважаемый покупатель! Благодарим Вас за покупку. Наши изделия уникальны, поскольку они сочетают в себе великолепный дизайн и передовые технические решения. Кроме того, они комбинируются с другими изделиями из этой линейки и могут стать стильными элементами интерьера и дизайна. Надеемся, что Вы в полной мере оцените функциональные возможности Вашего бытового прибора. С наилучшими пожеланиями.

 
 
 
Kære Kunde, mange tak for dit køb. Vores produkter er unikke, da de forener æstetisk research og innovativt teknisk design. De passer perfekt sammen med de andre produkter i serien, og kan stå som et enkeltstående møbel af design. Vi håber, at du vil værdsætte din hårde hvidevares funktionalitet, og sender de bedste hilsner.

Szanowny Kliencie, Dziękujemy za Twój zakup. Nasze produkty są wyjątkowe, ponieważ łączą intensywne badania estetyczne z innowacyjnym projektem technicznym. Są one skoordynowane z innymi produktami z asortymentu i mogą stanowić elementy wyposażenia i wystroju. Mamy nadzieję, że będą Państwo mogli w pełni korzystać z funkcjonalności tego urządzenia. Serdecznie pozdrawiamy.

Arvoisa Asiakas, kiitämme sinua hankintasi johdosta. Tuotteemme ovat ainutlaatuisia, koska niissä yhdistyvät esteettisyys ja innovatiivinen tekninen suunnittelu. Ne sopivat yhteen muiden valikoimaan kuuluvien tuotteiden kanssa toimien samalla sisustus- ja design-tuotteina. Toivomme, että voit nauttia täysin siemauksin kodinkoneesi toiminnoista. Sydämellisin terveisin.

Kjære kunde. Vi takker for at dere valgte å kjøpe et av våre produkter. Våre produkter er unike fordi de forener søken etter estetikk med en nyskapende teknisk design. De koordineres med andre produkter i vårt sortiment og kan ha funksjon som både møbel- og designvare. Vi håper du får fullt utbytte av ditt husholdningsapparat, og sender deg våre beste hilsener.

تحتفظ جهة التصنيع بحقوقها في إجراء أية تغييرات تراها ضرورية لتحسين منتجاتها دون إخطار مسبق. لذا، تعتبر الرسوم التوضيحية والأوصاف الواردة في هذا الدليل غير ملزمة ولكنها إرشادية فقط.

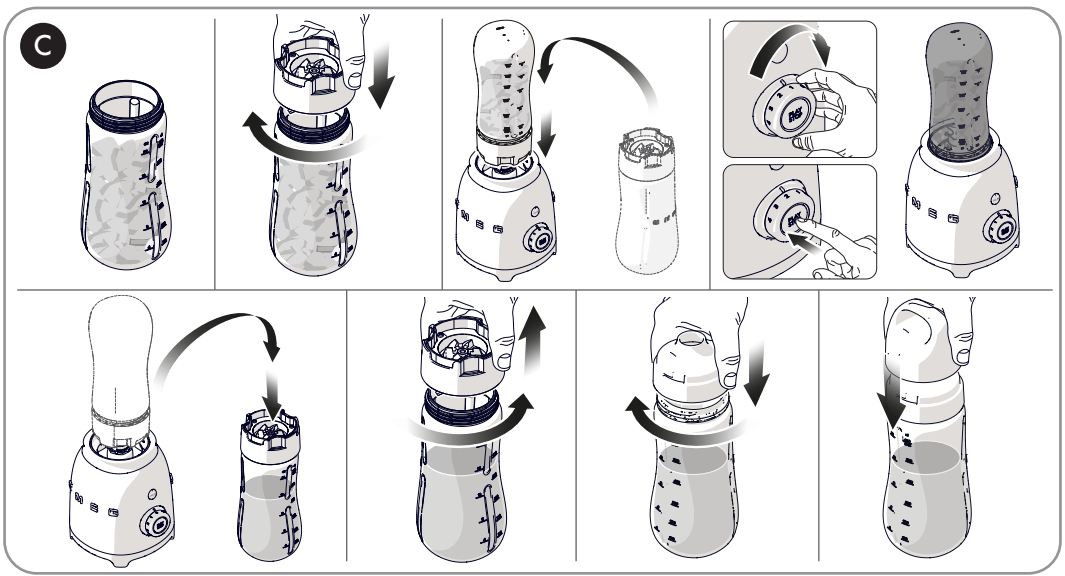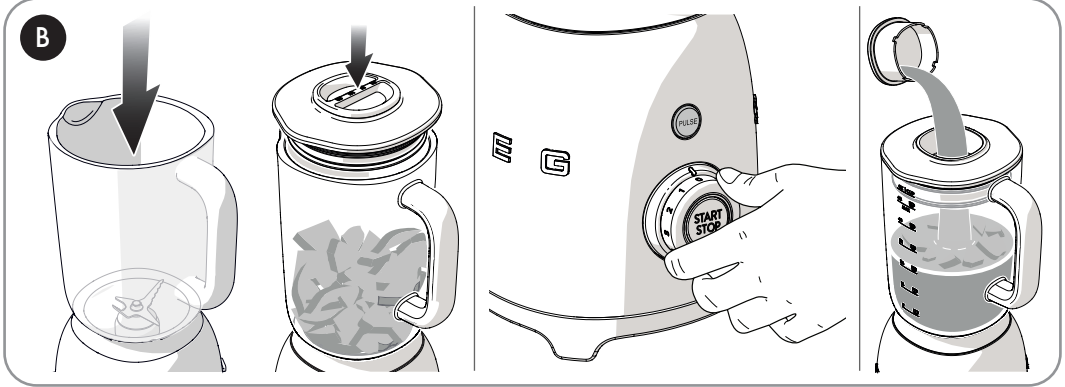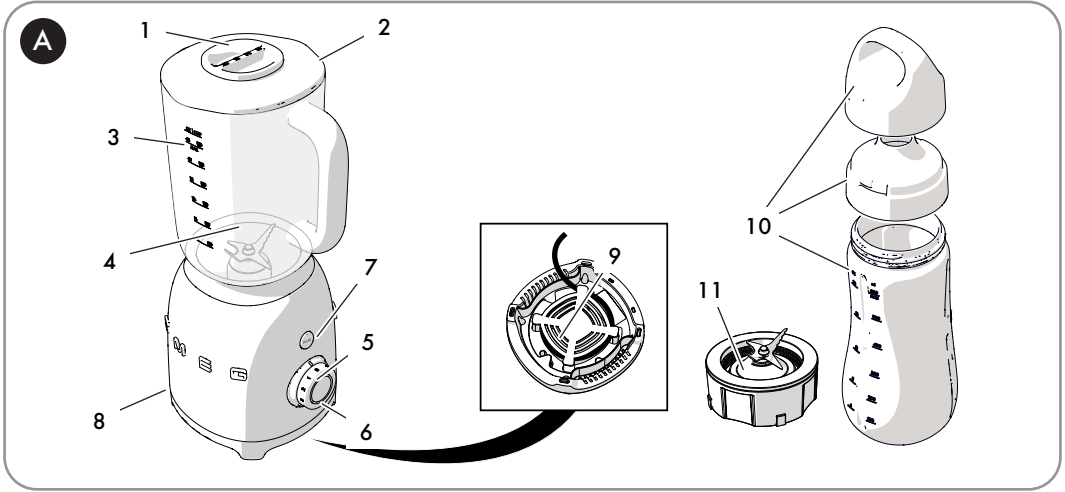



1 Instructions

This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

1.1 Intended use

Failure to comply with the safety instructions and failure to read the instructions manual may lead to the appliance being used incorrectly and cause personal injury.

- Do not use the appliance for purposes other than those for which it was designed. The appliance must only be used for mixing, blending and emulsifying ingredients and crushing ice. Every other use is considered improper.
- The appliance is not designed to operate with external timers or with remote-control systems.
- Use the appliance only indoors.



In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

- This appliance and the bottle accessory* are intended for household use and similar applications such as:
 - in kitchen areas provided for personnel in shops, offices and other work environments
 - in bed and breakfast and farm accommodation
 - by guests in hotels, motels and other residential type environments.
- Any other use, for example in restaurants,

coffee bars and coffee shops is considered improper.

- The bottle accessory can only be used in combination with the BLF03 blender. The accessory can be used to blend, mix and emulsify various ingredients for preparing drinks, juices and smoothies to be enjoyed indoors or out.
- Do not use the appliance for anything other than its intended use.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Children shall not play with the appliance.

1.2 General safety instructions

Follow all safety instructions in order to use the appliance safely:

- Read this user manual carefully before using the appliance.
- Do not leave the appliance unattended while it is operating.
- Do not immerse the appliance, the power cord or the plug in water or any other liquid.
- Do not use the appliance when the power cord or the plug is damaged or when the appliance has been dropped or is damaged in any manner.
- If the power cable is damaged, contact technical support immediately to arrange replacement.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

* Standard on some models. Also available as an optional accessory.



Instructions

- The cable is short to prevent accidents. Do not use an extension cord.
- Ensure the cord does not come into contact with sharp edges.
- Do not pull on the cord to unplug it from the power socket.
- Do not place the appliance above or near lit hob burners or electric rings, inside an oven or near other heat sources.
- This appliance is fitted with a ground connection for functional purposes only.
- Do not attempt to repair or make modifications to the appliance yourself: in the event of a fault, it should only be repaired by a qualified technician or contact the technical assistance service.
- Never try to put out a fire or flames with water: turn off the appliance and remove the plug from the socket and smother the flames with a fire blanket or other appropriate cover.
- Do not touch moving parts while the appliance is operating. Keep hands, hair and clothing, and utensils away from moving parts during operation, to prevent personal injury and/or damage to the appliance.
- Always disconnect the appliance from the power supply when it is not in use, left unattended or faulty.
- Always disconnect the appliance from the power supply before installing and removing the components.
- Always disconnect the appliance from the power supply and let it cool down before cleaning it.
- Always use the blender with the lid in place.
- Check that the lid is correctly closed before turning on the blender.
- Do not overfill the blender (max. 1.5 litres).
- Do not use the blender with parts or accessories of other manufacturers.
- Only use original spare parts. The use of spare parts not approved by the manufacturer could lead to fires, electric shocks or personal injury.
- Only place the blender on level and dry surfaces.
- Do not operate the blender with the jug empty as this could permanently damage the blade assembly.
- Do not use the blender as a storage compartment. Keep it empty before and after use.

1.3 Caution

- Be careful if hot liquid is poured into the carafe or bottle accessory as it can be ejected out of the appliance due to a sudden steaming.
- Let hot liquids cool down to room temperature before pouring them into the jug.
- To avoid the risk of cuts, and damage to the blender, do not put your hands or tools like cutlery, etc. into the blender jug while it is operating. You can use a wood or plastic spatula only when the blender is off.
- Do not use harsh detergents or sharp objects to wash or remove residues from the blender jug.
- Be careful when handling the sharp cutting blades, emptying the jug and during cleaning.
- Make sure that the bottle accessory and its blade assembly are fixed correctly.
- Do not overfill the bottle accessory (maximum 600 ml).
- The blades are sharp: Cutting hazard! Never touch the blades with your hands.

* Standard on some models. Also available as an optional accessory.



Take great care when installing, removing and cleaning the bottle accessory blade assembly.

- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Avoid touching movable parts, such as the blade assembly.
- Do not operate the blender without the jug or bottle accessory mounted.
- Instructions for cleaning of the appliance can be found in the "5 Cleaning and Care" section.

1.4 Connecting the appliance

Make sure that the voltage and frequency of the power supply correspond to those indicated on the data plate on the bottom of the appliance.

If the plug of the appliance is not compatible with the socket, contact Technical Assistance service for replacement.

1.5 Manufacturer liability

The manufacturer shall not be liable for injuries or property damage caused by:

- Use of the appliance other than as envisaged
- Not having read the user manual
- Tampering with any part of the appliance
- Use of non-original spare parts
- Failure to observe the safety instructions



Please keep these instructions carefully. If the appliance is passed on to others, they should also be given this instructions booklet.

These instructions can be downloaded from the Smeg website "www.smeg.com".

1.6 Disposal



This appliance must be disposed of separately from other refuse (Directive 2012/19/EU).

- The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.
- Old appliances do not belong in household waste! To comply with current legislation, old appliances, on reaching the end of their useful lives, should be taken to a disposal facility where they can be sorted. The relevant local authorities or their waste disposal operators can provide further information.
- Dispose of the packing materials at an appropriate disposal facility.



Description

2 Appliance description (Fig. A)

- 1) Measuring cup
- 2) Lid with pouring hole
- 3) 1.5 litre jug
- 4) Jug blades
- 5) Control knob
- 6) START/STOP button
- 7) Pulse button
- 8) Motor base
- 9) Built-in cord wrap
- 10) 600 ml bottle accessory with cap and cover *
- 11) Bottle accessory blade assembly

2.1 Before first use



Danger of electrocution

- Plug into an earthed 3-pin socket.
- Do not remove the earth pin.
- Do not use an adapter.
- Do not use an extension cord.
- Failure to follow these instructions could result in death, fire, or electrical shock.

- Remove all stickers and labels from the blender and clean the motor base with a damp cloth.
- Remove the jug from the blender.
- Wash and dry thoroughly (see "5.2 Cleaning the parts").



Danger of sudden start-up

Make sure the blender is unplugged before fitting or removing the blade assembly.

2.2 Description of parts (Fig. A)

Measuring cup (1)

Can be used for dosing the ingredients.

Lid with pouring hole (2)

The lid is fitted with a seal that closes the jug tightly. It has a pouring hole in the centre to make it easier to add ingredients safely when in operation.

1.5 litre Tritan™ jug (3)

Jug with lip and graduated scale marked in litres and cups. Minimum capacity 0.25 litres (1 cup), maximum capacity 1.5 litres (6 cups).

Jug blades (4)

Stainless steel blade assembly for crushing ice cubes and preparing delicious smoothies, milkshakes, cocktails etc.

* Standard on some models. Also available as an optional accessory.



2.3 Description of controls

Control knob (5)

The knob allows you to select one of the four manual speeds available or to start the four pre-set programs: Smoothie, Green Smoothie, Ice Crush and Self-Clean. See "4.1 Speed setting suggestions when using the pre-set programs" for further information on which speed to use.

START/STOP button (6)

The button is used to start/stop blender.

Pulse button (7)

This function allows you to use maximum blending speed when operating in manual mode or it can be used on its own at different speeds (See "4 Functions").

2.4 Description of accessories*

600 ml bottle accessory, cap with spout and cover (10)

Tritan™ bottle, cap with spout and cover with silicone seal.

Bottle accessory blade assembly (11)

Stainless steel blade assembly for preparing delicious smoothies, milkshakes, cocktails etc.



Sharp blades Danger of cuts

- Never touch the blades with your hands.
- Take great care when installing and removing the blade assembly.



The accessories intended to come into contact with food are made of materials that comply with the provisions of current legislation.

* Standard on some models. Also available as an optional accessory.



Use

3 Use

3.1 First use

Thoroughly wash and dry the components as indicated in section "5 Cleaning and care".

3.2 Using the blender (Fig. B)

- Insert the blender jug (3) onto the motor base (8).
- Place the ingredients in the jug (3), taking care not to exceed the maximum capacity (1.5 litres - 6 cups).
- Position the lid (2) with the measuring cup (1) fitted onto the blender jug (3). Ensure the lid (2) is tightly closed.
- Insert the plug of the blender into the power socket. The red LED will turn on to indicate the presence of power.
- Use the control knob (5) to select the required speed or one of the pre-set programs.



The **PULSE** button can be used in combination with speeds 1 to 3.

- Press the **START** button to start blending. See the table "4.1 Speed setting suggestions when using the pre-set programs".



Speeds 1 - 4 allow continuous blending. You can stop the operation pressing the **STOP** button.

The speed can be changed at any time during the blending process.



Important

Do not operate at speeds 1-4 for more than one minute at a time.

- You can add additional ingredients whilst blending by removing the measuring cup (1) and pouring ingredients through the hole in the lid (2).



Danger

The blender is not intended for blending or grinding dry foods. Only add dry ingredients together with a sufficient amount of liquid to prevent the blender from overheating, which could permanently damage the blade unit.

- If you have selected a speed between 1 and 4, when you have finished blending, press the **STOP** button, turn the control knob (5) to '0' and unplug the blender. If one of the pre-set programs has been selected, the appliance will stop automatically. Refer to section "4 Functions" for further information.



Cancelling/stopping the blending cycle

The blending cycle can be cancelled or stopped at any time pressing the **START/ STOP** button.



3.3 How to use the bottle accessory * (Fig. C)



Sharp blades

Danger of cuts

- Never touch the blades with your hands.
- Take great care when installing and removing the blade assembly.
- Place the ingredients into the bottle (10), taking care not to exceed the maximum capacity (600 ml).



For best results, we recommend that you:

- add the hard ingredients first, then the soft ones and then the liquids;
- make sure that the liquid ingredients do not exceed 400 ml;
- do not to exceed the maximum capacity (600 ml).



Risk of damage to the accessory

The Ice Crush program cannot be used with the bottle accessory. If you wish to add ice, crush it in the blender jug and then transfer it to the bottle.

- Secure the blade support (11) to the bottle by turning it clockwise. Make sure that it is fastened tightly.
- Place the base of the blender on a flat horizontal surface. Plug it into the power outlet.
- Turn the bottle over (10) and connect it to the motor base (8).

- Use the control knob (5) to select the required speed or one of the four pre-set programs according to the result you wish to obtain and start the blender to prepare the drink.
- If you have selected a speed between 1 and 4, when you have finished blending, press the **STOP** button, turn the knob to '0' and unplug the blender. If one of the pre-set programs has been selected, the appliance will stop automatically. Refer to section "4 Functions" for further information.

* Standard on some models. Also available as an optional accessory.



Use

4 Functions



Safety lock system

The blender is fitted with a safety lock system that automatically switches off the blender when the jug is removed. It also features a motor safety cut-out which trips if the motor is overloaded.



Smooth Start System

When the appliance is started, the speed gradually increases until the set speed is reached. This prevents damage to the appliance and accessories, prevents ingredient spillage and improves mixing. The Smooth Start system only works when a speed between 1 and 4 is selected and does not work in **PULSE** mode or with pre-set programs.

PULSE function

When the product is operating at speeds 1-3, pressing the **PULSE** button will run the blender at maximum speed.

The device will return to the initial speed that was selected when the button is released. When the product is off, turning the knob to one of the 4 speeds and pressing the **PULSE** button will make the blender run at the selected speed.



The **PULSE** function does not work in combination with the pre-set programs.

Pre-set programs

When one of the four above mentioned pre-set programs is selected, after you have pressed the **START** button, the blender will start to operate automatically and the central button LED will light up to indicate that the cycle is running. The button LED switches off at the end of the cycle.

For further information, see the table "4.1 Speed setting suggestions when using the pre-set programs".



4.1 Speed setting suggestions when using the pre-set programs

Function	Description	Time	Suggested preparations
Manual 1-4	Variable speeds 1-4 allow maximum control of the blender.	60 sec	Fruit or vegetable purée, soups, smoothies, sauces and dressings, whipped cream, blended crushed ice drinks, batters, mousses, sorbets.
 PULSE	Allows you to control the mixing duration and frequency accurately.	5 sec	Ice cubes, chopped meat/fish.
 SMOOTHIE	The blender operates at the correct speed for achieving thick and creamy results.	50 sec	Smoothies/milkshakes made with fresh or frozen fruit.
 GREEN SMOOTHIE	Allows you to make delicious healthy smoothies.	50 sec	Green smoothies made with spinach, kale, fruit and leafy green vegetables.
 ICE CRUSH	The blender operates with short bursts of power to crush the ice until it becomes slush.	40 sec	Crushed ice cubes, chopped frozen fruit and vegetables.

The blender has a self-cleaning function:

Function	Description	Time	User instructions
 Self-cleaning	Short bursts of power and high speed, allows you to clean the jug and the bottle accessory.	60 sec	See section "5.3 Using the jug / bottle accessory self-clean option" for detailed instructions.

i The speeds indicated in the table are approximate and can vary depending on the recipe and on the interaction of the different ingredients used and the consistency you wish to obtain.

* Standard on some models. Also available as an optional accessory.



Cleaning and care

Tips for using your blender

- For best results, we recommend that you:
 - dice the food to be blended.
 - first add the liquids, then the leafy green vegetables and then the soft ingredients followed by dried fruit / seeds / cereals and lastly ice / frozen ingredients.
 - you might have to stop mixing in order to push the ingredients down the sides of the blender jug with a spatula.
- When blending together liquid and dry ingredients, blend liquids first and then add the dry ingredients.
- Remove any hard parts from foods to be blended (e.g. cores or stones from fruit, bones from meat etc.).
- Do not allow food residues to dry inside the jug and blades for too long, as they could become difficult to remove. If you cannot clean it right away, pour a little warm water and let it soak.
- Do not process hot food. Let it cool to room temperature before blending.

5 Cleaning and care



Improper use. Danger of electrocution

Make sure the blender is unplugged before fitting or removing the blade assembly.



Improper use. Risk of damage to surfaces.

- Do not use steam jets to clean the appliance.
- Do not use cleaning products containing chlorine, ammonia or bleach on parts with metallic finishes (e.g. anodised, nickel- or chrome-plated).
- Do not use abrasive or corrosive detergents (e.g. powder products, stain removers and metallic scourers).
- Do not use rough or abrasive materials or sharp metal scrapers.

5.1 Cleaning the motor base

To keep the outer surface of the blender motor base in good condition, it should be cleaned regularly after use. Let the appliance cool down first. Use a damp and soft cloth with mild detergent.



5.2 Cleaning the parts



Sharp blades

Danger of cuts

- Never touch the blades with your hands.
- Take great care when installing and removing the blade assembly.

Blender

- Wash the jug in warm soapy water or use the pre-set SELF-CLEAN program. DO NOT wash in a dishwasher.
- The blender lid (2) and measuring cup (1) can be washed by hand in warm water and a mild detergent or in the dishwasher.
- Make sure that the parts are completely dry before putting them back on the blender.

Bottle accessory*

- The bottle (10) can be washed by hand or in a dishwasher, making sure that you remove the blade assembly (11), or using the pre-set SELF-CLEAN program.
- The blade assembly (11) should only be washed by hand in warm water and a mild detergent.
- Make sure that the parts are completely dry before putting them back on the blender.

5.3 Using the jug / bottle accessory self-clean option

- Place a few drops of warm water and mild detergent in the jug / bottle accessory.
- Select the pre-set SELF-CLEAN program.
- Press the START button.
- Remove the jug/bottle accessory, empty and rinse.
- Dry thoroughly.



* Standard on some models. Also available as an optional accessory.

What to do if...

Problem	Cause	Solution
The motor will not start.	The motor has overheated.	Unplug the blender and leave the motor to cool.
	The plug is not properly inserted in the power socket.	Insert the plug into the power socket. Do not use adaptors or extensions. Check that the house main breaker is on.
	The cable is defective.	Contact an Authorised Service Centre.
	Lack of power.	Check that the house main breaker is on.
The blender vibrates.	The blender is not resting on a stable surface.	Place the blender on a flat, stable surface.
	The anti-slip rubber feet are worn.	Have them replaced at an Authorised Service Centre.
	The speed used is too high or the load is excessive.	Set a lower speed and ensure the jug has not been overfilled.
The blender switches on, but the blades do not turn.	The jug has not been correctly locked into its base.	Remove the jug from its base and lock it into place.
The blender stops while operating.	The motor has overheated.	Unplug the blender and allow the motor to cool down.
The red LED flashes at regular intervals.	The jug is not correctly inserted in the base.	Check the position of the jug on the base.
The blender stops during operation and the white LED flashes.	The blades may have jammed.	Unplug and free the blades using a spatula.



If the problem has not been resolved or in the event of another type of fault, contact your local technical support centre.



6 Recipes

Smoothie

Ingredients:

- 2 nectarines, pitted (or tinned peaches in syrup) and cut into pieces
- 125 g frozen raspberries
- 125 g frozen strawberries
- 125 ml orange juice
- 125 ml apple juice

Method:

1. Put the nectarine pieces and the juices into the blender jug.
2. Add the frozen fruit.
3. Turn the control knob to the Smoothie program and start the blender by pressing the **START** button.

Green Smoothie

Ingredients:

- 240 ml water
- 300 g green grapes
- 180 g pineapple, peeled, halved
- 120 g fresh spinach
- 110 g small banana, peeled
- 130 g ice cubes

Method:

1. Put the pieces of fruit and the water into the blender jug.
2. Add the ice cubes.
3. Turn the control knob to the Green Smoothie program and start the blender by pressing the **START** button.

Whipped cream

Ingredients:

- 500 g cold whipping cream
- 50 g icing sugar

Method

1. Whip the cream in the blender at speed 3 for approximately 30 seconds.
2. You can stop the blender by pressing the **STOP** button.
3. Add the icing sugar.
4. Select speed 4 and whip for a further 15 seconds, until the cream is fully whipped. The cream can also be whipped without icing sugar. In this case, select speed 4 and whip for 40 seconds.

Vegetable purée

Ingredients:

- 300 g courgettes (or vegetables of your choice)
- 100 g water or vegetable stock

Method

1. Steam the vegetables and cut them into rounds.
2. Put the pieces in the blender and blend for 45 seconds at speed 4, adding a little water or vegetable stock at a time until you obtain a homogeneous purée.

Il costruttore si riserva di apportare senza preavviso tutte le modifiche che riterrà utili al miglioramento dei propri prodotti. Le illustrazioni e le descrizioni contenute in questo manuale non sono quindi impegnative ed hanno solo valore indicativo.

The manufacturer reserves the right to make any changes deemed necessary for the improvement of its products without prior notice. The illustrations and descriptions contained in this manual are therefore not binding and are merely indicative.

Le fabricant se réserve la faculté d'apporter, sans préavis, toutes les modifications qu'il jugera utiles pour l'amélioration de ses produits. Les illustrations et les descriptions figurant dans ce manuel ne sont pas contraignantes et n'ont qu'une valeur indicative.

Der Hersteller behält sich vor, ohne vorherige Benachrichtigung alle Änderungen vorzunehmen, die er zur Verbesserung seiner Produkte für nützlich erachtet. Die in diesem Handbuch enthaltenen Illustrationen und Beschreibungen sind daher unverbindlich und dienen nur zur Veranschaulichung.

De fabrikant behoudt zich het recht voor zonder waarschuwing alle wijzigingen aan te brengen die hij nodig acht om zijn producten te verbeteren. De afbeeldingen en de beschrijvingen die aanwezig zijn in deze handleiding zijn niet bindend, en hebben enkel een aanduidende waarde.

El fabricante se reserva el derecho a aportar sin aviso previo todas las modificaciones que considere útiles para la mejora de sus propios productos. Las ilustraciones y las descripciones contenidas en este manual no son vinculantes y tienen solo valor indicativo.

O fabricante reserva-se o direito de efetuar, sem aviso prévio, qualquer modificação que vise o melhoramento dos respetivos produtos. As ilustrações e descrições contidas neste manual não são, por isso, vinculativas e possuem apenas valor indicativo.

Tillverkaren förbehåller sig rätten att genomföra alla de ändringar som anses nödvändiga för att förbättra de egna produkterna utan att meddela detta i förväg. De illustrationer och beskrivningar som finns i aktuell manual är därmed inte bindande utan endast indikativa.

Для улучшения выпускаемой продукции изготовитель оставляет за собой право вносить без предварительного предупреждения любые изменения, которые он сочтет целесообразными. Рисунки и описания, содержащиеся в данном руководстве, не являются обязывающими и носят ознакомительный характер.

Fabrikanten forbeholder sig retten til, uden varsel, at udføre alle de ændringer, der vurderes nyttige for at forbedre egne produkter. Tegningerne og beskrivelserne i denne manual er derfor kun vejledende og ikke bindende.

Producent zastrzega sobie prawo do nanoszenia, bez uprzedniego powiadomienia, wszelkich zmian, które uzna za stosowne w celu ulepszenia swoich produktów. Rysunki i opisy zawarte w niniejszej instrukcji nie są zobowiązujące i mają jedynie charakter orientacyjny.

Valmistaja pidättää itsellään oikeuden tehdä ohjeisiin mielestään tarpeellisia muutoksia ilman ennakkoilmoitusta. Tässä oppaassa olevat kuvat ja piirrookset eivät näin ollen ole sitovia, vaan ne annetaan vain viitteellisessä mielessä.

Produsenten forbeholder seg rett til å foreta endringer på sine produkter grunnet tekniske fremskritt, uten forutgående varsel. Illustrasjonene og beskrivelsene i denne bruksanvisningen er derfor ikke bindende og skal kun betraktes som retningsgivende.

عملينا العزيز، شكرا لك على شراء أحد أجهزتنا. تعد منتجاتنا فريدة لأنها تجمع بين الأسلوب المميز والحلول التقنية المبتكرة. وهي تتناسب تماما مع المنتجات الأخرى في مجموعتنا وتعمل بنفس القدر كتصميمات قائمة بذاتها في مطبخك. نأمل أن تستمتع باستخدام هذا الجهاز الجديد! وتفضلوا بقبول وافر الاحترام والتقدير.